PRIMECOOLER

ComfortCase

PRIMECOOLER ComfortCase line includes several models in the same style. The model can be equipped with the LCD display or there is a choice available without the LCD unit. The unique case structure with PSU mounted on the bottom part of the case enables easy air flow.
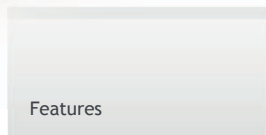
LCD display

Constant monitoring of the actual system status. The LCD shows exact time and date. Measured temperatures from CPU, HDD and system are displayed both in values and graphically and are shown both in ˚C and ˚F scale. The LCD also monitors the CPU fan rotation and HDD using.

Decent Lighting

To emphasize the elegance of the ComfortCase series, PRIMECOOLER assembled the crystal wheel that lights up in decent blue light while the computer is turned on.

Types

Features	PRIMECOOLER ComfortCase A-LCD	PRIMECOOLER ComfortCase A
LCD display Check if chosen model is assembled with LCD display.	✓	–
Lighting Check if chosen model is assembled with Decent Lighting.	✓	✓

Specification

Dimension	405 × 173 × 380 mm	Suitable for PSU	ATX
Weight	3.1 kg	Front panel	2 × USB 2.0, Audio AC97/HD
Space for fans	Back - 80 or 92 mm	Color	Black
	Side - 120 mm	Shipping dimension	450 × 210 × 405 mm
External bays	2 × 5.25", 1 × 3.5"	Shipping weight	3.8 kg
Internal bays	1 × 3.5"	Shipping volume	0.0382725 m³
Slots	6 × PCI		
Suitable for MB	ATX or microATX		

ComfortCase / Types

ComfortCase A-LCD

ComfortCase A